

## **STOCKMASTER MEZZALIFT - RISK ASSESSMENT AND INSTRUCTIONS FOR ASSEMBLY AND USE.**

### **1. Design Purpose and Safe Operation.**

This product features a manually powered lift table and has been designed for floor to floor transport of goods. It requires permanent fixing at the base and top of the product Mast. The top of the Mast must be fastened to a rigid structure such as a mezzanine floor. Consistent with safe work practice for manual handling, the user should not manually lift items exceeding 20 kg onto or from the lift table and **THE TOTAL LOAD ON THE LIFT TABLE MUST NOT EXCEED A MAXIMUM OF 60 kg.** When using the lift table;

- Always lower the Lift Table after use
- Check that stacked loads are stable before moving the Lift Table
- Keep the load centred on the Lift Table
- When using the Lift Table with small items place them in a suitable picking bin.

### **2. General Instructions**

- NEVER STAND UNDER THE LIFT TABLE
- ENSURE THE PRODUCT IS FIRMLY FASTENED BEFORE USE
- ENSURE THE UNIT IS UNDAMAGED AND HAS NO MISSING PARTS BEFORE USE
- KEEP ALL PARTS OF YOUR BODY CLEAR OF THE LIFT TABLE AND ANY LOAD PLACED ON THE LIFT TABLE
- DO NOT USE THE DEVICE TO MOVE PERSONS
- DO NOT LEAVE LOOSE TOOLS OR OTHER OBJECTS ON THE LIFT TABLE
- CHECK FOR OVERHEAD HAZARDS BEFORE USE
- DO NOT USE WHERE ELECTRICAL HAZARD EXISTS

### **DO NOT EXCEED THE MAXIMUM RATED LOAD**

(The maximum load includes the weight of all items including tools, equipment or goods being handled)  
The load rating is given on a label fixed to the top of the Mast.

### **3. Labelling**

The load rating for the lift table is given on a label fixed to the face of the winch case. **DO NOT REMOVE THESE LABELS.**

### **4. Assembly**

General Assembly

Instructions for assembly are provided in graphic form and are also available on the StockMaster website at [www.stockmaster.co](http://www.stockmaster.co). These must be followed to ensure correct assembly and safe working of the product. They also provide the simplest method for assembly. If you are unsure of any of the instructions, please consult your dealer. Note: Any defect arising as a result of incorrect assembly will not be covered under your product warranty. A listing of dealers is available from Custom Ladder Company and enquiries can be made on the website at [www.stockmaster.co](http://www.stockmaster.co)

P

### **5. Checking and Testing**

On completion of the assembly and BEFORE INITIAL USE, do the following:

- a) Check that there are no loose fastenings. (bolts and nuts)
- b) Bring the lift table to the lowest position. Place a load of 5 kg on the Lift Table and raise it approximately 0.3 metre. Check that the load does not move. Repeat the test at the rated load of 60 kg. **IF THE LOAD MOVES, DO NOT USE THE LIFT TABLE** and refer to your dealer.

### **6. Maintenance**

When correctly assembled, little maintenance is required. It is however advisable to periodically check that all fastenings in the structure remain tight, and the assembly keys should be retained for this purpose.

### **7. Model Number and date/s of Manufacture.**

This information is to be found on labels fixed in the following locations:

- a) Underneath the lift table (indicates manufacturing date only)
- b) On the inside face of a one piece mast Manual models only
- c) On the inside faces of a two piece mast Manual models only (indicates Manual manufacturing date only for the upper section)
- d) On the base of the winch case - (indicates manufacturing date only)

**DO NOT REMOVE THESE LABELS.** They are required for product identification and part replacement.